

Workman Industrial Bicycle Upgrade Guide

Frames Choices



Model 2600

Men's 20" Double Top Tube - Straight Bar shown with optional chrome fenders and chainguard, 3-speed hub and front drum brake



Model INB

Men's 18" Double Top Tube - Curved Bar with standard black polycarbonate fenders and chainguard



Model ING

Women's 18" Double Top Tube Step-Thru with standard black polycarbonate fenders and chainguard

Colors

standard



upgrade



Front Brake



C6: Front Drum Brake

Internal Hubs



C8B: 3-Speed Thumb Shift

Rim Choices



WTC Steel Clincher Rim (std)



WTC Alloy Rim w/SS Spokes



PW2: Painted Rims

Tire Upgrades



K26: Blackwall Kevlar




L8: Whitewall



L4A Worksman Airless Technology Tires

Handlebar Choices

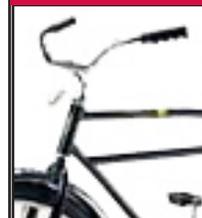

24" Cruiser (std.)



H2: 9" Hi-Rise

Pedal Upgrades



P18: Flashing LED
No batteries ever!



N18 Oversize Alloy Platform



7217-EXT: Alloy Pedal Extenders

Fender Choices



FC26CP: Chrome Steel



Black Polycarbonate (std)

Saddle Choices



Standard 9" Double Sprong



N19: 13" X-Wide Comfort

Basket Choices



G2: 21" x 15" x 9"



G1: 18" x 13" x 6"



G4: Rear Side Baskets

Audible Warning Device Choices



3973: Electric Mega Horn



P3: Classic Squeeze Bulb



P2: Classic Ding Dong Bell

Workman Tee Shirts



Grey with "Flying W" Logo



Navy with Retro Cruiser

Safety Accessories



3040: Safety Vest



P8: Safety Flag



P122: LED F/R Light Set



P19: Helmet (asst'd colors)

**Looking for even more choices?
Please see our "Design Your Own Cruiser" page.**